JOCAM'S STALLS-TACK ORGANIZERS-ACCESSORIES

WWW.JOCAMS.COM **1-866-422-1077**

FRONT WALL ASSEMBLY INSTRUCTIONS:

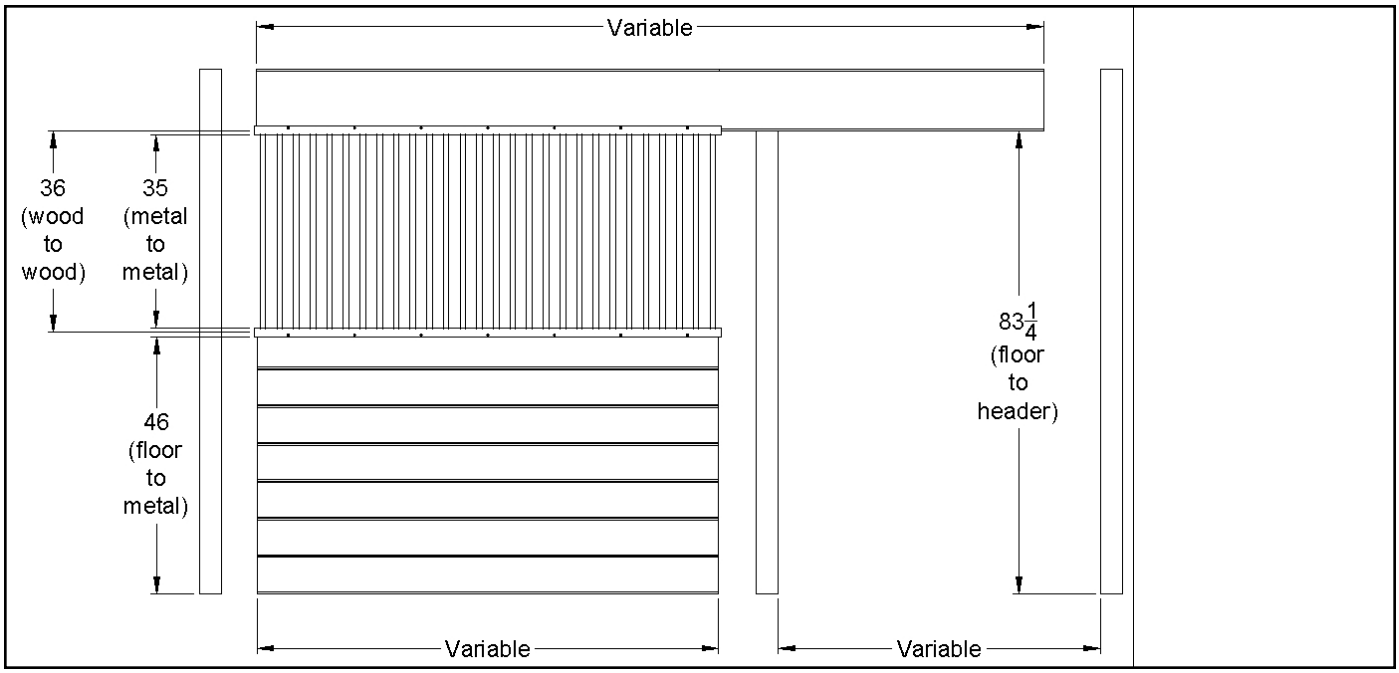

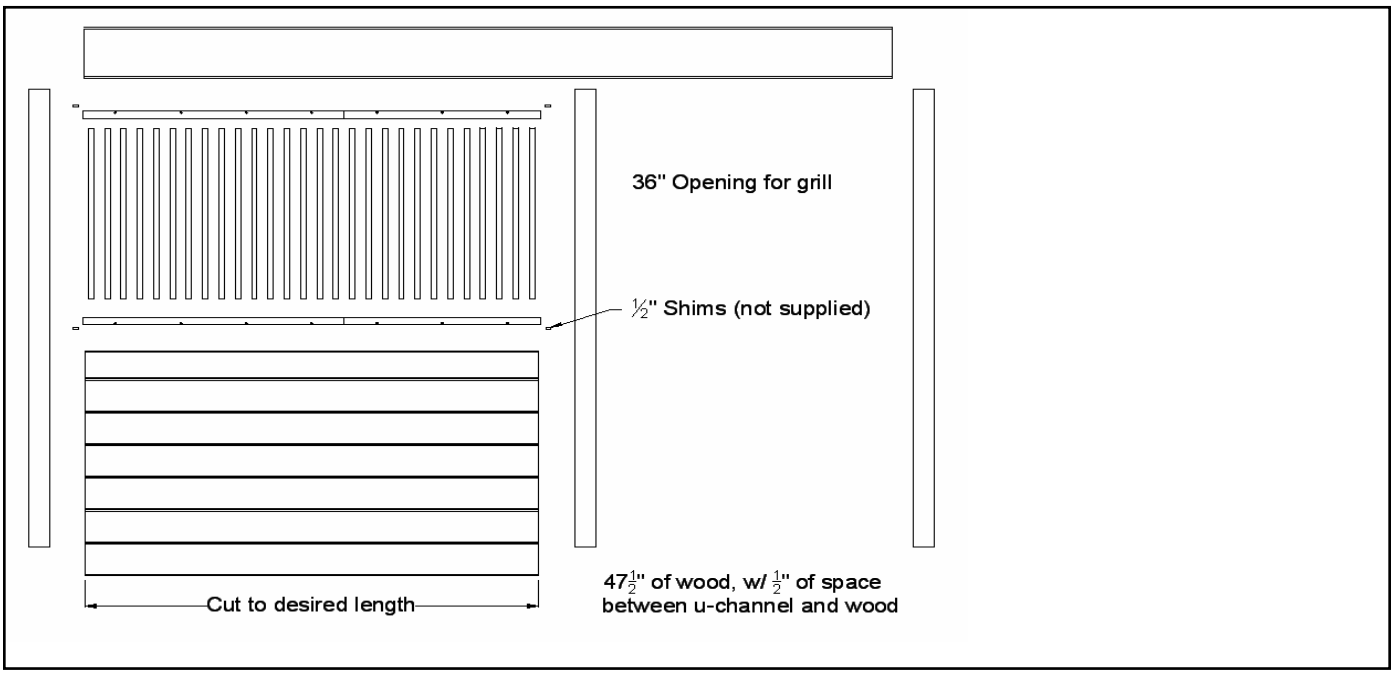

Front Wall Assembly:

* Install 1 grill section at a time, repeat steps 4 - 8 for each section

1. Install bottom 2 x 8 board flush with inside door post and outside wall post. Check to make sure board is level before fully fastening with screws or nails.
2. Install remaining 2 x 8 boards until the total height is 47 ½ inches from the floor to the top edge of the last board.
3. Without fully fastening it, install the header board 83 ½ inches from the floor to the lower edge of the board (or 36 inches from the top edge of the lower wall). Check for level. Do not fully fasten.
4. Tack grill channel spacers to the bottom edge of the header board, ensuring they will fall in between the grill bars.
5. Fasten grill channel to header board, making sure it is tight against the spacers.
6. Set the bottom grill channel over the top of the lower wall.
7. Insert grill bars into top grill channel, then bottom grill channel - loosen the header board if necessary.
8. Slide bottom grill channel up grill bars and insert grill channel spacers. Slide the grill channel tight against the spacers and fasten.
9. Measure remaining space and cut remaining grill channels to fit if necessary. Repeat steps 4 - 8.
10. Loosen header board and tap down tight against the grill bars. Securely fasten to each post.
11. Fasten post fillers to uncovered posts if desired.